



1/1

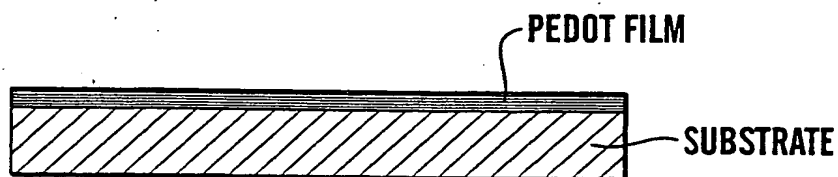


SPIN PEDOT FILM ON SUBSTRATE

Fig. 1

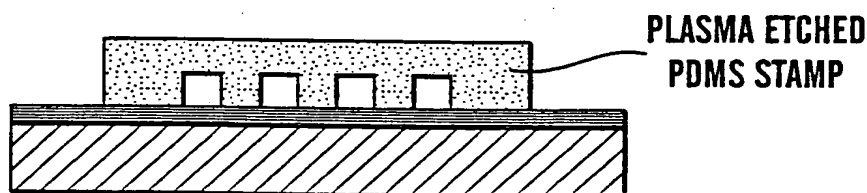

APPLY STAMP AND HEAT

Fig. 2

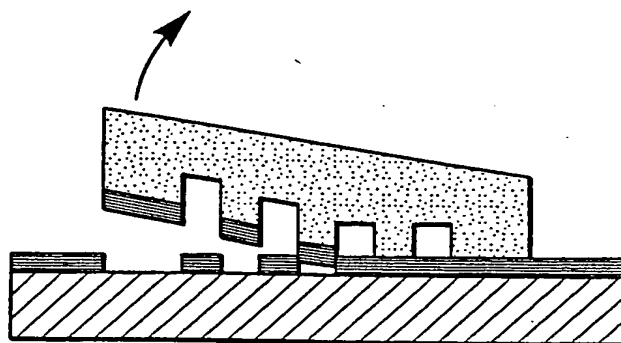

PEEL OFF STAMP AND STAMP-ADHERED PEDOT

Fig. 3